


# Using uM-FPU V3 with the BASIC Stamp®

# Introduction

The uM-FPU V3 chip is a 32-bit floating point coprocessor that can be easily interfaced with the BASIC Stamp<sup>®</sup> BS2, BS2e, BS2sx, BS2p24, BS2p40, BS2pe, or BS2px to provide support for 32-bit IEEE 754 floating point operations and 32-bit long integer operations. The uM-FPU V3 chip supports both I<sup>2</sup>C and SPI connections.

This document describes how to use the uM-FPU V3 chip with the BASIC Stamp. For a full description of the uM-FPU V3 chip, please refer to the uM-FPU V3 Datasheet and uM-FPU V3 Instruction Reference. Application notes are also available on the Micromega website.

# uM-FPU V3 Pin Diagram and Pin Description

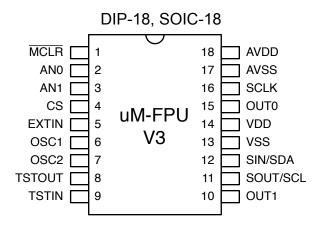

Pin	Name	Type	Description
1	/MCLR	Input	Master Clear (Reset)
2	AN0	Input	Analog Input 0
3	AN1	Input	Analog Input 1
4	CS	Input	Chip Select, Interface Select
5	EXTIN	Input	External Input
6	OSC1	Input	Oscillator Crystal (optional)
7	OSC2	Output	Oscillator Crystal (optional)
8	TSTOUT	Output	Test Output, Debug Monitor - Tx
9	TSTIN	Input	Test Input, Debug Monitor - Rx
10	OUT1	Output	Test Point 1
11	SOUT	Output	SPI Output, Busy/Ready Status
	SCL	Input	I <sup>2</sup> C Clock

12	SIN SDA	Input In/Out	SPI Input I <sup>2</sup> C Data
13	VSS	Power	Digital Ground
14	VDD	Power	Digital Supply Voltage
15	OUT0	Output	Test Point 0
16	SCLK	Input	SPI Clock
17	AVSS	Power	Analog Ground
18	AVDD	Power	Analog Supply Voltage


# Connecting uM-FPU V3 to the BASIC Stamp using 2-wire SPI

Only two pins are required for interfacing to the BASIC Stamp to the uM-FPU V3 chip using a 2-wire SPI interface. The communication uses a bidirectional serial interface that requires a clock pin and a data pin. The default settings for these pins are shown below (they can be changed to suit your application):

FpuClk	Pin 15
FpuOut	Pin 14
Fpuln	Pin 14

The FpuOut and FpuIn pins are defined separately in case you want to change to a 3-wire SPI interface. Although the uM-FPU V3 chip supports SPI with chip select, this mode is not used by the current support routines. The support routines assume the uM-FPU V3 chip is always selected, so the FpuClk, FpuIn, and FpuOut pins should not be used for other connections as this would likely result in loss of synchronization between the BASIC Stamp and the uM-FPU V3 coprocessor.

#### **BASIC Stamp Pins**

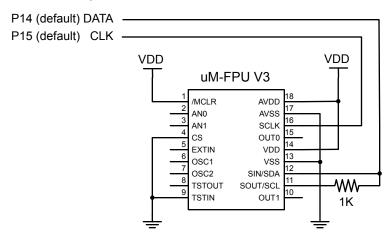


# Connecting uM-FPU V3 to the BASIC Stamp using I2C

The uM-FPU V3 can also be connected using an  $I^2C$  interface. The default slave ID for the uM-FPU is \$C8. The default setting for the  $I^2C$  pins is shown below (they can be changed to suit your application):

FpuPin Pin 0 (SDA is Pin 0, SCL is Pin 1)

### **BASIC Stamp Pins**

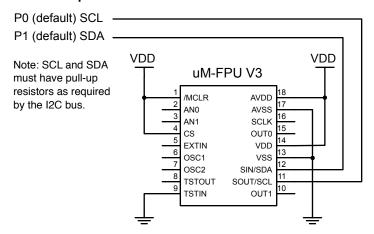

# Brief Overview of the uM-FPU V3 chip

For a full description of the uM-FPU V3 chip, please refer to the uM-FPU V3 Datasheet, uM-FPU V3 Instruction Reference. Application notes are also available on the Micromega website.

The uM-FPU V3 chip is a separate coprocessor with its own set of registers and instructions designed to provide microcontrollers with 32-bit floating point and long integer capabilities. The BASIC Stamp communicates with the uM-FPU using a SPI or I<sup>2</sup>C interface. Instructions and data are sent to the uM-FPU, and the uM-FPU performs the calculations. The BASIC Stamp is free to do other tasks while the uM-FPU performs calculations. Results can be read back to the BASIC Stamp or stored on the uM-FPU for later use. The uM-FPU V3 chip has 128 registers, numbered 0 through 127, that can hold 32-bit floating point or long integer values. Register 0 is often used as a temporary register and is modified by some of the uM-FPU V3 instructions. Registers 1 through 127 are available for general use.

The SELECTA instruction is used to select any one of the 128 registers as register A. Register A can be regarded as an accumulator or working register. Arithmetic instructions use the value in register A as an operand and store the result of the operation in register A. If an instruction requires more than one operand, the additional operand is specified by the instruction. The following example selects register 2 as register A and adds register 5 to it:

```
SELECTA, 2 select register 2 as register A
FSET, 5 register[A] = register[A] + register[5]
```

# Sending Instructions to the uM-FPU V3 chip

Appendix A contains a table that gives a summary of each uM-FPU V3 instruction, with enough information to follow the examples in this document. For a detailed description of each instruction, refer to the *uM-FPU V3 Instruction Reference*.

To send instructions to the uM-FPU using a SPI interface, the SHIFTOUT command is used as follows:

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [FADD, 5]
```

To send instructions to the uM-FPU using an I<sup>2</sup>C interface, the I2COUT command is used as follows:

```
12COUT FpuPin, FpuID, 0, [FADD, 5]
```

The part inside the square brackets specifies the instructions and data to send to the uM-FPU. The part before the square brackets is always the same, and depends on whether you are using an SPI or I<sup>2</sup>C interface. It tells the BASIC Stamp how to communicate with the uM-FPU. The SHIFTOUT command is used for the examples in this document, but the I2COUT command would be substituted if an I<sup>2</sup>C interface is used. Note: There is one difference when sending a Word variable. The SHIFTOUT command can use the [dataWord\16] syntax, whereas I2COUT only sends 8 bit bytes, so the syntax would be [dataWord.HIGHBYTE, dataWord.LOWBYTE].

All instructions have an opcode that tells the uM-FPU which operation to perform, The following example calculates the square root of register A:

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SQRT]
```

Some instructions require additional operands or data and are specified by the bytes following the opcode. The following example adds register 5 to register A.

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [FADD, 5]
```

Some instructions return data. This example reads the lower 8 bits of register A:

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [LREADBYTE] SHIFTIN FpuIn, FpuClk, MSBPRE, [dataByte]
```

The following example adds the value in register 5 to the value in register 2.

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SELECTA, 2, FADD, 5]
```

It's a good idea to use constant definitions to provide meaningful names for the registers. This makes your program code easier to read and understand. The same example using constant definitions would be:

```
Total CON 2 'total amount (uM-FPU register)
Count CON 5 'current count (uM-FPU register)
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SELECTA, Total, FADD, Count]
```

# **Tutorial Examples**

Now that we've introduced some of the basic concepts of sending instructions to the uM-FPU, let's go through a tutorial example to get a better understanding of how it all ties together. This example takes a temperature reading from a DS1620 digital thermometer and converts it to Celsius and Fahrenheit.

Most of the data read from devices connected to the BASIC Stamp will return some type of integer value. In this example, the interface routine for the DS1620 reads a 9-bit value and stores it in a word variable on the BASIC Stamp called rawTemp. The value returned by the DS1620 is the temperature in units of 1/2 degrees Celsius. The following instructions load the rawTemp value to the uM-FPU, converts the value to floating point, then divides it by 2 to get degrees in Celsius.

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST,

[SELECTA, DegC, LOADWORD, rawTemp\16, FSET0, FDIVI, 2]

Description:

SELECTA, DegC select DegC as register A

LOADWORD, rawTemp\16 load rawTemp to register 0 and convert to floating point

FSET0 DegC = register[0] (i.e. the floating point value of rawTemp)

FDIVI, 2 divide by the floating point value 2.0
```

To get the degrees in Fahrenheit we use the formula F = C \* 1.8 + 32. Since 1.8 is a floating point constant, it would normally be loaded once in the initialization section of the program and used later in the program. The value 1.8 can be loaded using the ATOF (ASCII to float) instruction as follows:

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SELECTA, F1_8, ATOF, "1.8", 0, FSET0]

Description:

SELECTA, F1.8 select F1_8 as register A

ATOF, "1.8", 0 load the string 1.8 (note: the string must be zero terminated), convert the string to floating point, and store in register 0

FSET0 F1 8 = register[0] (i.e. 1.8)
```

We calculate the degrees in Fahrenheit (DegF = DegC \* 1.8 + 32) as follows:

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST,

[SELECTA, DegF, FSET, DegC, FMUL, F1_8, FADDI, 32]

Description:

SELECTA, DegF select DegF as register A

FSET, DegC DegF = DegC

FMUL, F1_8 DegF = DegF * 1.8

FADDI, 32 DegF = DegF + 32.0
```

Note: this tutorial example is intended to show how to perform a familiar calculation, but the FCNV instruction could be used to perform unit conversions in one step. See the *uM-FPU V3 Instruction Reference* for a full list of conversions.

There are support routines provided for printing floating point and long integer numbers. Print\_Float prints an unformatted floating point value and displays up to eight digits of precision. Print\_FloatFormat prints a formatted floating point number. We'll use Print FloatFormat to display the results. The format variable is

used to select the desired format, with the tens digit specifying the total number of characters to display, and the ones digit specifying the number of digits after the decimal point. The DS1620 has a maximum temperature of 125° Celsius and one decimal point of precision, so we'll use a format of 51. Before calling the print routine the uM-FPU register is selected and the format variable is set. The following example prints the temperature in degrees Celsius and Fahrenheit.

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SELECTA, DegC]
format = 51
GOSUB Print_FloatFormat

SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SELECTA, DegF]
format = 51
GOSUB Print FloatFormat
```

Sample code for this tutorial and a wiring diagram for the DS1620 are shown at the end of this document. The file *demo1.bs2* is also included with the support software. There is a second file called *demo2.bs2* that extends this demo to include minimum and maximum temperature calculations. If you have a DS1620 you can wire up the circuit and try out the demos.

# uM-FPU Support Software for the BASIC Stamp

Two template files contain all of the definitions and support code required for communicating with the uM-FPU V3 chip:

```
umfpuV3-spi.bs2 provides support for a 2-wire SPI connection to the uM-FPU V3 chip provides support for an I<sup>2</sup>C connection to the uM-FPU V3 chip
```

These files can be used directly as the starting point for a new program, or the definitions and support code can be copied to another program. They contain the following:

- pin definitions for the uM-FPU V3
- opcode definitions for all uM-FPU V3 instructions
- various definitions for the word variable used by the support routines
- a sample program with a place to insert your application code
- the support routines described below

### Fpu\_Reset

To ensure that the BASIC Stamp and the uM-FPU coprocessor are synchronized, a reset call must be done at the start of every program. The Fpu\_Reset routine resets the uM-FPU V3 chip, confirms communications, and returns the sync character \$5C if the reset is successful. A sample reset call is included in the *umfpuV3-spi.bs2* and *umfpuV3-i2c.bsp* files.

#### Fpu\_Wait

The uM-FPU V3 chip must have completed all instructions in the instruction buffer, and be ready to return data, before sending an instruction to read data from the uM-FPU. The Fpu\_Wait routine checks the status of the uM-FPU and waits until it is ready. The print routines check the ready status, so it isn't necessary to call Fpu\_Wait before calling a print routine, but if your program reads directly from the uM-FPU using the SHIFTIN or I2CIN commands, a call to Fpu\_Wait must be made prior to sending the read instruction. An example of reading a byte value is as follows:

```
GOSUB Fpu_Wait
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [LREADBYTE]
SHIFTIN FpuIn, FpuClk, MSBPRE, [dataByte]
```

#### Description:

- wait for the uM-FPU to be ready
- send the LREADBYTE instruction
- read a byte value

The uM-FPU V3 chip has a 256 byte instruction buffer. In most cases, data will be read back before 256 bytes have been sent to the uM-FPU. If a long calculation is done that requires more than 256 bytes to be sent to the uM-FPU, an Fpu Wait call should be made at least every 256 bytes to ensure that the instruction buffer doesn't overflow.

#### Fpu\_ReadStatus

The current status byte is read from the uM-FPU and returned in the status variable.

## Print\_Float

The value in register A is displayed on the PC screen as a floating point value using the DEBUG command. Up to eight significant digits will be displayed if required. Very large or very small numbers are displayed in exponential notation. The length of the displayed value is variable and can be from 3 to 12 characters in length. The special cases of NaN (Not a Number), +Infinity, -Infinity, and -0.0 are handled. Examples of the display format are as follows:

1.0	NaN	0.0
1.5e20	Infinity	-0.0
3.1415927	-Infinity	1.0
-52.333334	-3.5e-5	0.01

#### Print\_FloatFormat

The value in register A is displayed on the PC screen as a formatted floating point value using the DEBUG command. The format byte is used to specify the desired format. The tens digit specifies the total number of characters to display and the ones digit specifies the number of digits after the decimal point. If the value is too large for the format specified, then asterisks will be displayed. If the number of digits after the decimal points is zero, no decimal point will be displayed. Examples of the display format are as follows:

Value in A register	format	Display format
123.567	61 (6.1)	123.6
123.567	62 (6.2)	123.57
123.567	42 (4.2)	*.**
0.9999	20 (2.0)	1
0.9999	31 (3.1)	1.0

## Print\_Long

The value in register A is displayed on the PC screen as a signed long integer using the DEBUG command. The displayed value can range from 1 to 11 characters in length. Examples of the display format are as follows:

1 500000 -3598390

#### Print\_LongFormat

The value in register A is displayed on the PC screen as a formatted long integer using the DEBUG command. The format variable is used to specify the desired format. A value between 0 and 15 specifies the width of the display field for a signed long integer. The number is displayed right justified. If 100 is added to the format value the value is displayed as an unsigned long integer. If the value is larger than the specified width, asterisks will be displayed. If the width is specified as zero, the length will be variable. Examples of the display format are as follows:

Value in register A	form	at	Display format
-1	10	(signed 10)	-1
-1	110	(unsigned 10)	4294967295
-1	4	(signed 4)	-1
-1	104	(unsigned 4)	***
0	4	(signed 4)	0
0	0	(unformatted)	0
1000	6	(signed 6)	1000

#### Print\_Version

The uM-FPU version string is displayed on the PC screen using the DEBUG command.

#### Print\_FpuString

The contents of the uM-FPU V3 string buffer are display to the PC screen using the DEBUG command. This call is made at the end of the Print\_Float, Print\_FloatFormat, Print\_Long and Print\_LongFormat routines so is not normally called directly by the user unless string instructions are being used directly.

# Loading Data Values to the uM-FPU

Most of the data read from devices connected to the BASIC Stamp will return some type of integer value. There are several ways to load integer values to the uM-FPU and convert them to 32-bit floating point or long integer values.

#### 8-bit Integer to Floating Point

The FSETI, FADDI, FSUBI, FSUBRI, FMULI, FDIVI, FDIVRI, FPOWI, and FCMPI instructions read the byte following the opcode as an 8-bit signed integer, convert the value to floating point, and then perform the operation. It's a convenient way to work with constants or data values that are signed 8-bit values. The following example stores the byte variable dataByte to the Result register on the uM-FPU.

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SELECTA, Result, FSETI, dataByte]
```

The LOADBYTE instruction reads the byte following the opcode as an 8-bit signed integer, converts the value to floating point, and stores the result in register 0.

The LOADUBYTE instruction reads the byte following the opcode as an 8-bit unsigned integer, converts the value to floating point, and stores the result in register 0.

#### 16-bit Integer to Floating Point

The LOADWORD instruction reads the two bytes following the opcode as a 16-bit signed integer (MSB first), converts the value to floating point, and stores the result in register 0. The following example adds the word variable dataWord to the Result register on the uM-FPU.

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SELECTA, Result, LOADWORD, dataWord\16, FADD0]
```

The LOADUWORD instruction reads the two bytes following the opcode as a 16-bit unsigned integer (MSB first), converts the value to floating point, and stores the result in register 0.

#### **Floating Point**

The FWRITEA, FWRITEA, and FWRITEO instructions read the four bytes following the opcode as a 32-bit floating point value and stores it in the specified register. This is one of the more efficient ways to load floating point constants, but requires knowledge of the internal representation for floating point numbers (see Appendix B). The uM-FPU V3 IDE can be used to easily generate the 32-bit values. This example sets Angle = 20.0 (the floating point representation for 20.0 is hex 41A00000).

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [FWRITE, Angle, $41, $A0, $00, $00]
```

#### **ASCII string to Floating Point**

The ATOF instruction is used to convert strings to floating point values. The instruction reads the bytes following the opcode (until a zero terminator is read), converts the string to floating point, and stores the result in register 0. For example, to set Angle = 1.5885:

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SELECTA, Angle, ATOF, "1.5885", 0, FSET0]
```

#### 8-bit Integer to Long Integer

The LSETI, LADDI, LSUBI, LMULI, LDIVI, LCMPI, LUDIVI, LUCMPI, and LTSTI instructions read the byte following the opcode as an 8-bit signed integer, convert the value to long integer, and then perform the operation. It's a convenient way to work with constants or data values that are signed 8-bit values. The following example adds the byte variable dataByte to the Total register on the uM-FPU.

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SELECTA, Total, LADDI, dataByte]
```

The LONGBYTE instruction reads the byte following the opcode as an 8-bit signed integer, converts the value to long integer, and stores the result in register 0.

The LONGUBYTE instruction reads the byte following the opcode as an 8-bit unsigned integer, converts the value to long integer, and stores the result in register 0.

#### 16-bit Integer to Long Integer

The LONGWORD instruction reads the two bytes following the opcode as a 16-bit signed integer (MSB first), converts the value to long integer, and stores the result in register 0. The following example adds the word variable dataWord to the Total register on the uM-FPU.

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SELECTA, Total, LONGWORD, dataWord\16, LADD0]
```

The LONGUWORD instruction reads the two bytes following the opcode as a 16-bit unsigned integer (MSB first), converts the value to long integer, and stores the result in register 0.

#### Long Integer

The LWRITE, LWRITEA, LWRITEX, and LWRITE0 instructions read the four bytes following the opcode as a 32-bit long integer value and stores it in the specified register. This is used to load integer values greater than 16 bits. The *uM-FPU V3 IDE* can be used to easily generate the 32-bit values. For example, to set Total = 500000:

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [LWRITE, Total, $00, $07, $A1, $20]
```

#### **ASCII string to Long Integer**

The ATOL instruction is used to convert strings to long integer values. The instruction reads the bytes following the opcode (until a zero terminator is read), converts the string to long integer, and stores the result in register 0. For example, to set Total = 500000:

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SELECTA, Total, ATOL, "5000000", 0, FSET0]
```

The fastest operations occur when the uM-FPU registers are already loaded with values. In time critical portions of code floating point constants should be loaded beforehand to maximize the processing speed in the critical section. With 128 registers available on the uM-FPU, it's often possible to pre-load all of the required constants. In non-critical sections of code, data and constants can be loaded as required.

# Reading Data Values from the uM-FPU

The uM-FPU V3 chip has a 256 byte instruction buffer which allows data transmission to continue while previous instructions are being executed. Before reading data, you must check to ensure that the previous commands have completed, and the uM-FPU is ready to send data. The Fpu\_Wait routine is used to wait until the uM-FPU is ready, then a read command is sent, and the SHIFTIN command is used to read data.

#### **Floating Point**

The FREADA, FREADA, and FREADO instructions read four bytes from the uM-FPU as a 32-bit floating point value. The following example reads the 32-bit floating point value from register A and stores it in byte variables byte0, byte1, byte2, and byte3.

```
GOSUB Fpu_Wait
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [FREADA]
SHIFTIN FpuIn, FpuClk, MSBPRE, [byte0, byte1, byte2, byte3]
```

#### Floating Point to ASCII string

The FTOA instruction can be used to convert floating point values to an ASCII string. The Print\_Float and Print\_FloatFormat routines use this instruction to read the floating point value from register A and display it on the PC screen.

#### 8-bit Integer

The LREADBYTE instruction reads the lower 8 bits from register A. The following example stores the lower 8 bits of register A in byte variable dataByte.

```
GOSUB Fpu_Wait
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [LREADBYTE]
SHIFTIN FpuIn, FpuClk, MSBPRE, [dataByte]
```

#### 16-bit Integer

The LREADWORD instruction reads the lower 16 bits from register A. The following example stores the lower 16 bits of register A in word variable dataWord.

```
GOSUB Fpu_Wait
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [LREADWORD]
SHIFTIN FpuIn, FpuClk, MSBPRE, [dataWord.HIGHBYTE, dataWord.LOWBYTE]
```

#### Long Integer

The LREAD, LREADX, and LREADX instructions read four bytes from the uM-FPU as a 32-bit long integer value. The following example reads the 32-bit long integer value from register A and stores it in byte variables byte0, byte1, byte2, and byte3.

```
GOSUB Fpu_Wait
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [LREADA]
SHIFTIN FpuIn, FpuClk, MSBPRE, [byte0, byte1, byte2, byte3]
```

#### Long Integer to ASCII string

The LTOA instruction can be used to convert long integer values to an ASCII string. The Print\_Long and Print\_LongFormat routines use this instruction to read the long integer value from register A and display it on the PC screen.

# **Comparing and Testing Floating Point Values**

Floating point values can be zero, positive, negative, infinite, or Not a Number (which occurs if an invalid operation is performed on a floating point value). The status byte is read using the Fpu\_ReadStatus routine. It waits for the uM-FPU to be ready before sending the READSTATUS command and reading the status. The current status is returned in the status variable. Bit definitions are provided for the status bits in the status variable as follows:

```
status_ZeroZero status bit (0-not zero, 1-zero)status_SignSign status bit (0-positive, 1-negative)status_NaNNot a Number status bit (0-valid number, 1-NaN)status_InfInfinity status bit (0-not infinite, 1-infinite)
```

The FSTATUS and FSTATUSA instructions are used to set the status byte to the floating point status of the selected register. The following example checks the floating point status of register A:

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [FSTATUSA]
GOSUB Fpu_ReadStatus
IF (status_Sign = 1) THEN DEBUG "Result is negative"
IF (status_Zero = 1) THEN DEBUG "Result is zero"
```

The FCMP, FCMP0, and FCMPI instructions are used to compare two floating point values. The status bits are set for the result of register A minus the operand (the selected registers are not modified). For example, to compare register A to the value 10.0:

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [FCMPI, 10]
GOSUB Fpu_ReadStatus
IF (status_Zero = 1) THEN
   DEBUG "Value1 = Value2"
ELSEIF (status_Sign = 1) THEN
   DEBUG "Value1 < Value2"
ELSE
   DEBUG "Value1 > Value2"
ENDIF
```

The FCMP2 instruction compares two floating point registers. The status bits are set for the result of the first register minus the second register (the selected registers are not modified). For example, to compare registers Value1 and Value2:

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [FCMP2, Value1, Value2] GOSUB Fpu ReadStatus
```

# Comparing and Testing Long Integer Values

A long integer value can be zero, positive, or negative. The status byte is read using the Fpu\_ReadStatus routine. It waits for the uM-FPU to be ready before sending the READSTATUS command and reading the status. The current status is returned in the status variable. Bit definitions are provided for the status bits in the status variable as follows:

```
status_Zero Zero status bit (0-not zero, 1-zero)
status_Sign Sign status bit (0-positive, 1-negative)
```

The LSTATUS and LSTATUSA instructions are used to set the status byte to the long integer status of the selected register. The following example checks the long integer status of register A:

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [LSTATUSA]
GOSUB Fpu_ReadStatus
IF (status_Sign = 1) THEN DEBUG "Result is negative"
IF (status Zero = 1) THEN DEBUG "Result is zero"
```

The LCMP, LCMP0, and LCMPI instructions are used to do a signed comparison of two long integer values. The status bits are set for the result of register A minus the operand (the selected registers are not modified). For example, to compare register A to the value 10:

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [LCMPI, 10]
GOSUB Fpu_ReadStatus
IF (status_Zero = 1) THEN
   DEBUG "Value1 = Value2"
ELSEIF (status_Sign = 1) THEN
   DEBUG "Value1 < Value2"
ELSE
   DEBUG "Value1 > Value2"
ENDIF
```

The LCMP2 instruction does a signed compare of two long integer registers. The status bits are set for the result of

the first register minus the second register (the selected registers are not modified). For example, to compare registers Value1 and Value2:

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, [LCMP2, Value1, Value2] GOSUB Fpu_ReadStatus
```

The LUCMP, LUCMPO, and LUCMPI instructions are used to do an unsigned comparison of two long integer values. The status bits are set for the result of register A minus the operand (the selected registers are not modified).

The LUCMP2 instruction does an unsigned compare of two long integer registers. The status bits are set for the result of the first register minus the second register (the selected registers are not modified).

The LTST, LTSTO and LTSTI instructions are used to do a bit-wise compare of two long integer values. The status bits are set for the logical AND of register A and the operand (the selected registers are not modified).


## **Further Information**

The following documents are also available:

uM-FPU V3 Datasheetprovides hardware details and specificationsuM-FPU V3 Instruction Referenceprovides detailed descriptions of each instructionuM-FPU Application Notesvarious application notes and examples

Check the Micromega website at www.micromegacorp.com for up-to-date information.

## **DS1620 Connections for Demo 1**

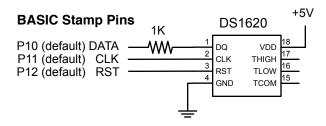

# Sample Code for Tutorial (Demo1-spi.bs2)

```
' This program demonstrates how to use the uM-FPU V3 floating point coprocessor
' connected to the Basic Stamp over an 2-wire SPI interface. It takes
' temperature readings from a DS1620 digital thermometer, converts them to
' floating point and displays them in degrees Celsius and degrees Fahrenheit.
      ----- uM-FPU V3 SPI definitions -----
'------
FpuClk
             PIN
                    15
                                 ' SPI clock (connects to SCLK/SCL)
FpuOut
             PIN
                    14
                                 ' SPI data out (connects to SIN/SDA)
                                ' SPI data in (connects to SOUT)
             PIN
                    14
FpuIn
```

'----- uM-FPU V3 opcodes -----

SELECTA	CON	\$01	' Select register A
ATOF	CON	\$1E	' Convert ASCII to float, store in reg[0]
FTOA	CON	\$1F	' Convert float to ASCII
FSET	CON	\$20	' reg[A] = reg[nn]
FMUL	CON	\$24	' reg[A] = reg[A] * reg[nn]
FSET0	CON	\$29	' reg[A] = reg[0]
FADDI	CON	\$33	<pre>' reg[A] = reg[A] + float(bb)</pre>
FDIVI	CON	\$37	<pre>' reg[A] = reg[A] / float(bb)</pre>
LOADWORD	CON	\$5B	' reg[0] = float(signed word)
LTOA	CON	\$9B	' Convert long integer to ASCII
SYNC	CON	\$F0	' Get synchronization byte
READSTATUS	CON	\$F1	' Read status byte
READSTR	CON	\$F2	' Read string from string buffer
VERSION	CON	\$F3	' Copy version string to string buffer
SyncChar	CON	\$5C	' sync character
_			-

'------ uM-FPU variables ------

dataWord	VAR	Word	' data word
dataHigh	VAR	dataWord.HIGHBYTE	' high byte of dataWord
dataLow	VAR	dataword.LOWBYTE	' low byte of dataLow
dataByte	VAR	dataLow '	(alternate name)
opcode	VAR	dataHigh '	opcode (same as dataHigh)
format	VAR	dataLow '	format (same as dataLow)
status	VAR	dataLow '	status (same as dataLow)

```
'-----
'----- DS1620 pin definitions -----
DS RST
                      ' DS1620 reset/enable
        PIN
                      ' DS1620 clock
DS CLK
        PIN
            11
                      ' DS1620 data
DS DATA
        PIN
             10
'----- uM-FPU register definitions -----
DeqC
        CON
             1
                       ' degrees Celsius
        CON
DegF
             2
                       ' degrees Fahrenheit
        CON
                      ' constant 1.8
F1 8
'------ variables ------
rawTemp
        VAR
             Word
                      ' raw temperature reading
'-----
Reset:
 DEBUG CLS, "Demo 1", CR, "----", CR
 GOSUB Fpu Reset
                      ' initialize uM-FPU
 IF status <> SyncChar THEN
  DEBUG "uM-FPU not detected."
  END
 ELSE
                      ' display version string
  GOSUB Print Version
 ENDIF
 GOSUB Init DS1620
                      ' initialize DS1620
                       ' load floating point constant
 SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SELECTA, F1_8, ATOF, "1.8", 0, FSET0]
'-----
'-----
Main:
                      ' get temperature reading from DS1620
 GOSUB Read DS1620
 DEBUG CRSRXY, 0, 4, "Raw Temp: ", IHEX4 rawTemp
                       ' send rawTemp to uM-FPU
                       convert to floating point
                       ' store in register
                       ' divide by 2 to get degrees Celsius
 SHIFTOUT FpuOut, FpuClk, MSBFIRST,
  [SELECTA, DegC, LOADWORD, rawTemp\16, FSET0, FDIVI, 2]
```

```
SHIFTOUT FpuOut, FpuClk, MSBFIRST, ' degF = degC * 1.8 + 32
   [SELECTA, DegF, FSET, DegC, FMUL, F1 8, FADDI, 32]
 DEBUG CRSRXY, 0, 5, "Degrees C: " ' display degrees Celsius
 SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SELECTA, DegC]
 format = 51
 GOSUB Print_FloatFormat
 DEBUG CRSRXY, 0, 6, "Degrees F: " ' display degrees Fahrenheit
 SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SELECTA, DegF]
 format = 51
 GOSUB Print FloatFormat
 PAUSE 2000
                                ' delay, then get the next reading
 GOTO Main
 END
'----- Init DS1620 -----
Init DS1620:
 LOW DS RST
                                ' initialize pin states
 HIGH DS CLK
 PAUSE 100
                               ' configure for CPU control
 HIGH DS RST
 SHIFTOUT DS DATA, DS CLK, LSBFIRST, [$0C, $02]
 LOW DS RST
 PAUSE 100
 HIGH DS RST
                                ' start temperature conversions
 SHIFTOUT DS DATA, DS CLK, LSBFIRST, [$EE]
 LOW DS RST
 PAUSE 1000
                                ' wait for first conversion
 RETURN
'----- Read DS1620 -----
Read DS1620:
 HIGH DS RST
                               ' read temperature value
 SHIFTOUT DS DATA, DS CLK, LSBFIRST, [$AA]
 SHIFTIN DS_DATA, DS_CLK, LSBPRE, [rawTemp\9]
 LOW DS RST
                               ' extend the sign bit
 IF rawTemp.BIT8 = 1 THEN rawTemp.HIGHBYTE = $FF
 RETURN
'-----
'----- uM-FPU V3 SPI support routines ----- 2006-10-27
'-----
Fpu Reset:
 SHIFTOUT FpuOut, FpuClk, MSBFIRST,
   PAUSE 10
                               ' check for synchronization
 SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SYNC]
 GOTO Fpu Status2
Fpu Wait:
```

```
INPUT FpuIn
                                        ' (required for 2-wire interface)
Fpu Wait2:
 IF (FpuIn = 1) THEN GOTO Fpu Wait2 ' wait until uM-FPU is ready
 RETURN
Fpu ReadStatus:
                                        ' read status byte
 GOSUB Fpu Wait
 SHIFTOUT FpuOut, FpuClk, MSBFIRST, [READSTATUS]
Fpu Status2:
 SHIFTIN FpuIn, FpuClk, MSBPRE, [status]
 RETURN
Print Version:
                                        ' print the uM-FPU version string
 SHIFTOUT FpuOut, FpuClk, MSBFIRST, [VERSION]
 GOTO Print FpuString
Print Float:
 format = 0
                                        ' set format to zero (free format)
                                        ' (fall through to Print FloatFormat)
Print FloatFormat:
                                        ' convert floating point to formatted ASCII
 opcode = FTOA
 GOTO Print Format
Print Long:
                                        ' set format to 0 (free format)
 format = 0
                                        ' (fall through to Print LongFormat)
Print LongFormat:
 opcode = LTOA
                                        ' convert long integer to formatted ASCII
                                        ' (fall through to Print Format)
Print Format:
                                        ' send conversion command
 SHIFTOUT FpuOut, FpuClk, MSBFIRST, [opcode, format]
Print_FpuString:
                                        ' wait until uM-FPU is ready
 GOSUB Fpu Wait
 SHIFTOUT FpuOut, FpuClk, MSBFIRST, [READSTR]
                                        ' display zero terminated string
   SHIFTIN FpuIn, FpuClk, MSBPRE, [dataByte]
    IF (dataByte = 0 OR dataByte >= 127) THEN EXIT
   DEBUG dataByte
 LOOP
 RETURN
'========== end of uM-FPU SPI support routines ====================
```

# Appendix A uM-FPU V3 Instruction Summary

Instruction	Opcod	e Arguments	Returns	Description
NOP	00			No Operation
SELECTA	01	nn		Select register A
SELECTX	02	nn		Select register X
CLR	03	nn		reg[nn] = 0
CLRA	04			reg[A] = 0
CLRX	05			reg[X] = 0, X = X + 1
CLR0	06			reg[nn] = reg[0]
COPY	07	mm,nn		reg[nn] = reg[mm]
COPYA	08	nn		reg[nn] = reg[A]
СОРҮХ	09	nn		reg[nn] = reg[X], X = X + 1
LOAD	0A	nn		reg[0] = reg[nn]
LOADA	0В			reg[0] = reg[A]
LOADX	0C			reg[0] = reg[X], X = X + 1
ALOADX	0D			reg[A] = reg[X], X = X + 1
XSAVE	0E	nn		reg[X] = reg[nn], X = X + 1
XSAVEA	0F			reg[X] = reg[A], X = X + 1
COPY0	10	nn		reg[nn] = reg[0]
COPYI	11	bb,nn		reg[nn] = long(unsigned byte bb)
SWAP	12	nn,mm		Swap reg[nn] and reg[mm]
SWAPA	13	nn		Swap reg[nn] and reg[A]
LEFT	14			Left parenthesis
RIGHT	15			Right parenthesis
FWRITE	16	nn,b1,b2,b3,b4		Write 32-bit floating point to reg[nn]
FWRITEA	17	b1,b2,b3,b4		Write 32-bit floating point to reg[A]
FWRITEX	18	b1,b2,b3,b4		Write 32-bit floating point to reg[X]
FWRITE0	19	b1,b2,b3,b4		Write 32-bit floating point to reg[0]
FREAD	1A	nn	b1,b2,b3,b4	Read 32-bit floating point from reg[nn]
FREADA	1B		b1,b2,b3,b4	Read 32-bit floating point from reg[A]
FREADX	1C		b1,b2,b3,b4	Read 32-bit floating point from reg[X]
FREAD0	1C		b1,b2,b3,b4	Read 32-bit floating point from reg[0]
ATOF	1E	aa00		Convert ASCII to floating point
FTOA	1F	bb		Convert floating point to ASCII
FSET	20	nn		reg[A] = reg[nn]
FADD	21	nn		reg[A] = reg[A] + reg[nn]
FSUB	22	nn		reg[A] = reg[A] - reg[nn]
FSUBR	23	nn		reg[A] = reg[nn] - reg[A]
FMUL	24	nn		reg[A] = reg[A] * reg[nn]
FDIV	25	nn		reg[A] = reg[A] / reg[nn]
FDIVR	26	nn		reg[A] = reg[nn] / reg[A]
FPOW	27	nn		reg[A] = reg[A] ** reg[nn]
FCMP	28	nn		Compare reg[A], reg[nn],
				Set floating point status
FSET0	29			reg[A] = reg[0]
FADD0	2A			reg[A] = reg[A] + reg[0]

FSUB0	2В		reg[A] = reg[A] - reg[0]
FSUBR0	2C		reg[A] = reg[O] - reg[A]
FMUL0	2D		reg[A] = reg[0] reg[A]
FDIV0	2E		reg[A] = reg[A] / reg[0]
FDIVR0	2F		reg[A] = reg[A] / reg[A]
FPOW0	30		reg[A] = reg[A] ** reg[0]
FCMP0	31		Compare reg[A], reg[0],
FCMPU	31		Set floating point status
FSETI	32	bb	reg[A] = float(bb)
FADDI	33	bb	reg[A] = reg[A] - float(bb)
FSUBI	34	bb	reg[A] = reg[A] - float(bb)
FSUBRI	35	bb	reg[A] = float(bb) - reg[A]
FMULI	36	bb	reg[A] = reg[A] * float(bb)
FDIVI	37	bb	reg[A] = reg[A] / float(bb)
FDIVRI	38	bb	reg[A] = float(bb) / reg[A]
FPOWI	39	bb	reg[A] = reg[A] ** bb
FCMPI	3A	bb	Compare reg[A], float(bb),
FCMP1	JA	DD	Set floating point status
FSTATUS	3B	nn	Set floating point status for reg[nn]
FSTATUSA	3C	1111	Set floating point status for reg[filig
FCMP2	3D	nn,mm	Compare reg[nn], reg[mm]
T CHF Z	ן שנ	1111, 11111	Set floating point status
FNEG	3E		reg[A] = -reg[A]
FABS	3F		reg[A] = I reg[A] I
FINV	40		reg[A] = 1 / reg[A]
SQRT	41		reg[A] = sqrt(reg[A])
ROOT	42	nn	reg[A] = root(reg[A], reg[nn])
LOG	43	1111	reg[A] = log(reg[A])
LOG10	44		reg[A] = log(log[A])
EXP	45		reg[A] = exp(reg[A])
EXP10	46		reg[A] = exp(reg[A])
SIN (FSIN)	47		reg[A] = expro(reg[A])
COS (FCOS)	48		reg[A] = cos(reg[A])
TAN (FTAN)	49		reg[A] = tan(reg[A])
ASIN	49 4A		reg[A] = asin(reg[A])
ACOS	4B		reg[A] = acos(reg[A])
ATAN	4C		reg[A] = atos(reg[A])
ATAN2	4D	nn	reg[A] = atan(reg[A])
DEGREES	4E	nn	reg[A] = dianz(reg[A], reg[nn])
	+		<del>                                     </del>
RADIANS	4F		reg[A] = radians(reg[A])
FMOD	50	nn	reg[A] = reg[A] MOD reg[nn]
FLOOR	51		reg[A] = floor(reg[A])
CEIL	52		reg[A] = ceil(reg[A])
ROUND	53		reg[A] = round(reg[A])
FMIN	54	nn	reg[A] = min(reg[A], reg[nn])
FMAX	55	nn	reg[A] = max(reg[A], reg[nn])
FCNV	56	bb	reg[A] = conversion(bb, reg[A])
FMAC	57	nn,mm	reg[A] = reg[A] + (reg[nn] * reg[mm])
FMSC	58	nn,mm	reg[A] = reg[A] - (reg[nn] * reg[mm])

LOADBYTE	59	bb		reg[0] = float(signed bb)
LOADUBYTE	5A	bb		reg[0] = float(unsigned byte)
LOADWORD	5B	b1,b2		reg[0] = float(signed b1*256 + b2)
LOADUWORD	5C	b1,b2		reg[0] = float(unsigned b1*256 + b2)
LOADE	5D			reg[0] = 2.7182818
LOADPI	5E			reg[0] = 3.1415927
LOADCON	5F	bb		reg[0] = float constant(bb)
FLOAT	60			reg[A] = float(reg[A])
FIX	61			reg[A] = fix(reg[A])
FIXR	62			reg[A] = fix(round(reg[A]))
FRAC	63			reg[A] = fraction(reg[A])
FSPLIT	64			reg[A] = integer(reg[A]),
				reg[0] = fraction(reg[A])
SELECTMA	65	nn,b1,b2		Select matrix A
SELECTMB	66	nn,b1,b2		Select matrix B
SELECTMC	67	nn,b1,b2		Select matrix C
LOADMA	68	b1,b2		reg[0] = Matrix A[bb, bb]
LOADMB	69	b1,b2		reg[0] = Matrix B[bb, bb]
LOADMC	6A	b1,b2		reg[0] = Matrix C[bb, bb]
SAVEMA	6B	b1,b2		Matrix A[bb, bb] = reg[A]
SAVEMB	6C	b1,b2		Matrix B[bb, bb] = reg[A]
SAVEMC	6D	b1,b2		Matrix C[bb, bb] = reg[A]
MOP	6E	bb		Matrix/Vector operation
LOADIND	7A	nn		reg[0] = reg[reg[nn]]
SAVEIND	7в	nn		reg[reg[nn]] = reg[A]
INDA	7C	nn		Select register A using value in reg[nn]
INDX	7D	nn		Select register X using value in reg[nn]
FCALL	7E	fn		Call user-defined function in Flash
EECALL	7F	fn		Call user-defined function in EEPROM
RET	80			Return from user-defined function
BRA	81	bb		Unconditional branch
BRA,cc	82	cc,bb		Conditional branch
JMP	83	b1,b2		Unconditional jump
JMP,cc	84	cc,b1,b2		Conditional jump
TABLE	85	tc,t0tn		Table lookup
FTABLE	86	cc,tc,t0tn		Floating point reverse table lookup
LTABLE	87	cc,tc,t0tn		Long integer reverse table lookup
POLY	88	tc,t0tn		reg[A] = nth order polynomial
GOTO	89	nn		Computed GOTO
LWRITE	90	nn,b1,b2,b3,b4		Write 32-bit long integer to reg[nn]
LWRITEA	91	b1,b2,b3,b4		Write 32-bit long integer to reg[A]
LWRITEX	92	b1,b2,b3,b4		Write 32-bit long integer to reg[X],
				X = X + 1
LWRITE0	93	b1,b2,b3,b4		Write 32-bit long integer to reg[0]
LREAD	94	nn	b1,b2,b3,b4	Read 32-bit long integer from reg[nn]
LREADA	95		b1,b2,b3,b4	Read 32-bit long value from reg[A]
LREADX	96		b1,b2,b3,b4	Read 32-bit long integer from reg[X], X = X + 1
LREAD0	97		b1,b2,b3,b4	Read 32-bit long integer from reg[0]
חעהעה∩	91	l	[ ", ", ", ", ", ", ", ", ", ", ", ", ",	Tricad oz-bit long integer from regio

LREADBYTE	98		bb	Read lower 8 bits of reg[A]
LREADWORD	99		b1,b2	Read lower 16 bits reg[A]
ATOL	9A	aa00		Convert ASCII to long integer
LTOA	9В	bb		Convert long integer to ASCII
LSET	9C	nn		reg[A] = reg[nn]
LADD	9D	nn		reg[A] = reg[A] + reg[nn]
LSUB	9E	nn		reg[A] = reg[A] - reg[nn]
LMUL	9F	nn		reg[A] = reg[A] * reg[nn]
LDIV	A0	nn		reg[A] = reg[A] / reg[nn]
				reg[0] = remainder
LCMP	A1	nn		Signed compare reg[A] and reg[nn],
	+			Set long integer status
LUDIV	A2	nn		reg[A] = reg[A] / reg[nn] reg[0] = remainder
LUCMP	A3	nn		Unsigned compare reg[A] and reg[nn], Set long integer status
LTST	A4	nn		Test reg[A] AND reg[nn],
				Set long integer status
LSET0	A5			reg[A] = reg[0]
LADD0	A6			reg[A] = reg[A] + reg[0]
LSUB0	A7			reg[A] = reg[A] - reg[0]
LMUL0	A8			reg[A] = reg[A] * reg[0]
TDIA0	A9			reg[A] = reg[A] / reg[0] reg[0] = remainder
T CMDO	7.7			Signed compare reg[A] and reg[0],
LCMP0	AA			set long integer status
LUDIV0	AB			reg[A] = reg[A] / reg[0]
				reg[0] = remainder
LUCMP0	AC			Unsigned compare reg[A] and reg[0],
				Set long integer status
LTST0	AD			Test reg[A] AND reg[0],
				Set long integer status
LSETI	AE	bb		reg[A] = long(bb)
LADDI	AF	bb		reg[A] = reg[A] + long(bb)
LSUBI	В0	bb		reg[A] = reg[A] - long(bb)
LMULI	B1	bb		reg[A] = reg[A] * long(bb)
LDIVI	В2	bb		reg[A] = reg[A] / long(bb)
LCMPI	В3	bb		reg[0] = remainder Signed compare reg[A] - long(bb),
HOFIE I	153			Set long integer status
LUDIVI	В4	bb		<pre>reg[A] = reg[A] / unsigned long(bb) reg[0] = remainder</pre>
LUCMPI	В5	bb		Unsigned compare reg[A] and long(bb), Set long integer status
LTSTI	В6	bb		Test reg[A] AND long(bb),
	1			Set long integer status
LSTATUS	В7	nn		Set long integer status for reg[nn]
LSTATUSA	В8			Set long integer status for reg[A]
LCMP2	В9	nn,mm		Signed long compare reg[nn], reg[mm]
				Set long integer status

LUCMP2	BA	nn,mm		Unsigned long compare reg[nn], reg[mm] Set long integer status
LNEG	BB			reg[A] = -reg[A]
LABS	BC			reg[A] = I reg[A] I
LINC	BD	nn		reg[nn] = reg[nn] + 1, set status
LDEC	BE	nn		reg[nn] = reg[nn] - 1, set status
LNOT	BF	1111		reg[A] = NOT reg[A]
LAND	CO	nn		reg[A] = reg[A] AND reg[nn]
LOR	C1	nn		reg[A] = reg[A] OR reg[nn]
LXOR	C2	nn		reg[A] = reg[A] XOR reg[nn]
LSHIFT	C3	nn		reg[A] = reg[A] shift reg[nn]
LMIN	C4	nn		reg[A] = min(reg[A], reg[nn])
LMAX	C5	nn		reg[A] = max(reg[A], reg[m])
LONGBYTE	C6	bb		reg[0] = long(signed byte bb)
LONGUBYTE	C7	bb		reg[0] = long(unsigned byte bb)
LONGWORD	C8	b1,b2		reg[0] = long(signed b1*256 + b2)
LONGUWORD	C9	b1,b2		reg[0] = long(unsigned b1*256 + b2)
LONGCON	CA	bb bb		reg[0] = long constant(nn)
SETOUT	D0	bb		Set OUT1 and OUT2 output pins
ADCMODE	D1	bb		Set A/D trigger mode
		ממ		A/D manual trigger
ADCTRIG	D2	-l-		
ADCSCALE	D3	ch		ADCscale[ch] = reg[0]
ADCLONG	D4	ch		reg[0] = ADCvalue[ch]
ADCLOAD	D5	ch		reg[0] = float(ADCvalue[ch]) * ADCscale[ch]
ADCWAIT	D6			wait for next A/D sample
TIMESET	D7			time = reg[0]
TIMELONG	D8			reg[0] = time (long integer)
TICKLONG	D9			reg[0] = ticks (long integer)
EESAVE	DA	nn,ee		EEPROM[ee] = reg[nn]
EESAVEA	DB	ee		EEPROM[ee] = reg[A]
EELOAD	DC	nn,ee		reg[nn] = EEPROM[ee]
EELOADA	DD	ee		reg[A] = EEPROM[ee]
EEWRITE	DE	ee,bc,b1bn		Store bytes starting at EEPROM[ee]
EXTSET	E0			external input count = reg[0]
EXTLONG	E1			reg[0] = external input counter
EXTWAIT	E2			wait for next external input
STRSET	E3	aa00		Copy string to string buffer
STRSEL	E4	bb, bb		Set selection point
STRINS	E5	aa00		Insert string at selection point
STRCMP	E6	aa00		Compare string with string buffer
STRFIND	E7	aa00		Find string and set selection point
STRFCHR	E8	aa00		Set field separators
STRFIELD	E9	bb		Find field and set selection point
STRTOF	EA			Convert string selection to floating point
STRTOL	EB			Convert string selection to long integer
READSEL	EC		aa00	Read string selection
SYNC	F0		5C	Get synchronization byte
DINC	+		1 30	Read status byte

READSTR	F2		aa00	Read string from string buffer
VERSION	F3			Copy version string to string buffer
IEEEMODE	F4			Set IEEE mode (default)
PICMODE	F5			Set PIC mode
CHECKSUM	F6			Calculate checksum for uM-FPU code
BREAK	F7			Debug breakpoint
TRACEOFF	F8			Turn debug trace off
TRACEON	F9			Turn debug trace on
TRACESTR	FA	aa00		Send string to debug trace buffer
TRACEREG	FB	nn		Send register value to trace buffer
READVAR	FC	nn		Read internal register value
RESET	FF			Reset (9 consecutive FF bytes cause a
				reset, otherwise it is a NOP)

**Notes:** Opcode Value in hexadecimal

Arguments Additional data required by instruction

Returns
Data returned by instruction
nn register number (0-127)
mm register number (0-127)
fn function number (0-63)

bb 8-bit value

b1,b2 16-bit value (b1 is MSB) b1,b2,b3,b4 32-bit value (b1 is MSB) b1...bn string of 8-bit bytes

ss Status byte cc Condition code

ee EEPROM address slot (0-255)

ch A/D channel number

bc Byte count

t1...tn String of 32-bit table values aa...00 Zero terminated ASCII string

SIN, COS, TAN have been renamed to FSIN, FCOS, FTAN in the BASIC Stamp support routines.

# Appendix B

# **Floating Point Numbers**

Floating point numbers can store both very large and very small values by "floating" the window of precision to fit the scale of the number. Fixed point numbers can't handle very large or very small numbers and are prone to loss of precision when numbers are divided. The representation of floating point numbers used by the uM-FPU V3 is defined by the 32-bit IEEE 754 standard. The number of significant digits for a 32-bit floating point number is slightly more than 7 digits, and the range of values that can be handled is approximately  $\pm 10^{38.53}$ .

#### 32-bit IEEE 754 Floating Point Representation

IEEE 754 floating point numbers have three components: a sign, exponent, the mantissa. The sign indicates whether the number is positive or negative. The exponent has an implied base of two and a bias value. The mantissa represents the fractional part of the number.

The 32-bit IEEE 754 representation is as follows:

Bit 31 30		30 2	3 22 0
	S	Exponent	Mantissa

## Sign Bit (bit 31)

The sign bit is 0 for a positive number and 1 for a negative number.

#### Exponent (bits 30-23)

The exponent field is an 8-bit field that stores the value of the exponent with a bias of 127 that allows it to represent both positive and negative exponents. For example, if the exponent field is 128, it represents an exponent of one (128 - 127 = 1). An exponent field of all zeroes is used for denormalized numbers and an exponent field of all ones is used for the special numbers +infinity, -infinity and Not-a-Number (described below).

#### Mantissa (bits 30-23)

The mantissa is a 23-bit field that stores the precision bits of the number. For normalized numbers there is an implied leading bit equal to one.

#### **Special Values**

#### Zero

A zero value is represented by an exponent of zero and a mantissa of zero. Note that +0 and -0 are distinct values although they compare as equal.

#### Denormalized

If an exponent is all zeros, but the mantissa is non-zero the value is a denormalized number. Denormalized numbers are used to represent very small numbers and provide for an extended range and a graceful transition towards zero on underflows. Note: The uM-FPU does not support operations

using denormalized numbers.

#### Infinity

The values +infinity and -infinity are denoted with an exponent of all ones and a fraction of all zeroes. The sign bit distinguishes between +infinity and -infinity. This allows operations to continue past an overflow. A nonzero number divided by zero will result in an infinity value.

#### Not A Number (NaN)

The value NaN is used to represent a value that does not represent a real number. An operation such as zero divided by zero will result in a value of NaN. The NaN value will flow through any mathematical operation. Note: The uM-FPU initializes all of its registers to NaN at reset, therefore any operation that uses a register that has not been previously set with a value will produce a result of NaN.

Some examples of 32-bit IEEE 754 floating point values displayed as BASIC Stamp data constants are as follows:

```
' 0.0
DATA
      $00, $00, $00, $00
                              0.1
DATA
      $3D, $CC, $CC, $CD
      $3F, $00, $00, $00
                              0.5
DATA
DATA
      $3F, $40, $00, $00
                              ' 0.75
                             0.9999
DATA
      $3F, $7F, $F9, $72
                             ' 1.0
      $3F, $80, $00, $00
DATA
                             ' 2.0
DATA
      $40, $00, $00, $00
DATA
      $40, $2D, $F8, $54
                             ' 2.7182818 (e)
      $40, $49, $0F, $DB
                             ' 3.1415927 (pi)
DATA
                             ' 10.0
      $41, $20, $00, $00
DATA
                             100.0
      $42, $C8, $00, $00
DATA
                             1000.0
DATA
      $44, $7A, $00, $00
DATA
      $44, $9A, $52, $2B
                             1234.5678
                              ' 1000000.0
      $49, $74, $24, $00
DATA
DATA
      $80, $00, $00, $00
                              ' -0.0
                             ' -1.0
DATA
      $BF, $80, $00, $00
      $C1, $20, $00, $00
                             ' -10.0
DATA
                             ' -100.0
DATA
      $C2, $C8, $00, $00
                             ' NaN (Not-a-Number)
DATA
      $7F, $C0, $00, $00
                             ' +inf
DATA $7F, $80, $00, $00
DATA $FF, $80, $00, $00
                              ' -inf
```